

Operation of the Scoreboards

Powering Up:

When the power to the scoreboard control box is turned on, **Code 03** must be entered to select baseball. Do the following:

1. Push the “**0**” button.
2. Push the “**3**” button.
3. Push the “**ENTER**” button.

Once the code is entered the scoreboard will power up.

Setting the Timer:

To set the Timer for a game that is 1 hour and 45 minutes long. Do the following:

1. Push the “**TIME**” button.
2. When the current set time is displayed on the control box:
 - a. Push the “**1**”.
 - b. Push the “**4**”.
 - c. Push the “**5**”,
 - d. Push the “**0**”.
 - e. Push the “**0**”.
 - f. Push the “**ENTER**” button to enter the new time.

(Note: once the new time has been entered the scoreboard will display the number 1 in the Time slot indicating that there is more than 1 hour time remaining. Once the time has timed below 1 hour the number 59 will be displayed. If the timer is timing, it must be stopped first before a new time can be entered.)

To Start the Timer:

Once the correct time has been set, start the Timer by pushing the “**START**” button. **(Note: if the STOP button is pushed the Timer will stop timing. Make sure that once the Timer has been started that the STOP button is not pushed.)**

Time Limits are as Follows:

<u>Age Group</u>	<u>Time Limit</u>	<u>Day of the Week</u>	<u>Enter</u>
5/6	1 hour	Mon.-Fri	10000
5/6	1hour 15 min	Sat.	11500
7/8	1 hour 15 min	Mon-Fri	11500
7/8	1 hour 30 min	Sat	13000
9/10 and 11/12	1 hour 30 min	Mon-Fri	13000
9/10 and 11/12	1 hour 45 min	Sat	14500
13/14/15	1 hour 45 min	Mon-Fri	14500
13/14/15	2 hours	Sat	20000